

SERVICE PARTS LIST


THE M.G. Series MGA 1500

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
ENGINE CONTROLS											
ACCELERATOR CONTROL											
	Pedal assembly—accelerator	AHH5300	AJ1	1							
1	Bush	AHH5301	AJ2	1							
2	Fulcrum pin—accelerator pedal	AHH5306	AJ3	1							
3	Nut for fulcrum pin	FNZ105	AJ4	1							
4	Washer for fulcrum pin (spring)	LWZ205	AJ5	1	24						
5	Bracket—accelerator pedal mounting	AHH5302	AJ6	1							
6	Screw—bracket to goal-post inner upright	HPZ0405	AJ7	4							
7	Washer for pedal bracket (plain)	PWZ104	AJ8	4							
8	Washer for pedal bracket (spring)	LWZ204	AJ9	4	12						
9	Pedal and cross-shaft assembly—accelerator	AHH5311	AJ10	1							
10	Locating collar—accelerator shaft	AHH5314	AJ11	1							
11	Bracket assembly—R/H—accelerator pedal shaft	AHH5320	AJ12	1							
12	Screw—bracket to goal-post—R/H	HPZ0405	AJ13	2							
13	Washer (plain) for screw	PWZ104	AJ14	2	12						
14	Washer (spring) for screw	LWZ204	AJ15	2							
15	Bracket assembly—L/H—accelerator pedal shaft	AHH5321	AJ16	1							
16	Screw—bracket to goal-post—L/H	HZS0405	AJ17	3							
17	Washer for screw (plain)	PWZ104	AJ18	3	12						
18	Washer for screw (spring)	LWZ204	AJ19	3							
19	Pad—pedal (rubber)	ACA5321	AJ20	1	12						
20	Tube—distance	AHH5303	AJ21	2	2						
21	Stop—accelerator pedal	AHH5304	AJ22	1	1						
22	Screw—distance tube/adjustable stop	PMZ0422	AJ23	2	2						
23	Nut for screw	FNZ104	AJ24	2	2						
24	Washer for nut (spring)	LWZ204	AJ25	2	2						
25	Washer for nut (plain)	PWZ104	AJ26	3	3	12					
26	Washer for cable to pedal (plain)	AJD7042	AJ27	2							
27	Washer for cable to shaft assembly (plain)	AJD7042	AJ28	1							
28	Adjustable stop—accelerator pedal	AHH5380	AJ29	1	1						
29	Screw for adjustable stop	HPZ0405	AJ30	2	2						
30	Washer for screw (spring)	LWZ204	AJ31	2	2						
31	Cable—accelerator	AHH5625	AJ32	1	1						
32	Pin—cable anchor	AHH5626	AJ33	1	1						
33	Guide—cable	AHH5308	AJ34	1	1						
34	Screw for guide to toeboard plate	PMZ0308	AJ35	2	2						
35	Nut for guide screw	FNZ103	AJ36	2	2						
36	Washer for guide screw (spring)	LWZ203	AJ37	2	2						
37	Clamp—accelerator cable	AHH5309	AJ38	1	1						
38	Nut for cable to clamp	FNZ104	AJ39	1	1						
39	Washer for cable to clamp (plain)	PWZ104	AJ40	1	1	12					
40	Bracket—accelerator return spring	84180	AJ41	1	1						


SERVICE PARTS LIST

THE M.G. Series MGA 1500

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	Accelerator Controls—continued										
1	Spring—accelerator return	AJJ3020	AJ42	.1	.1			AHH5621	Com. (C) 24594		
2	Bracket—abutment	AHH5310	AJ43	.1	.1						
3	Washer—cable to bracket (plain)	AJD7042	AJ44	.1	.1						
4	Washer—cable to bracket (spring)	AJD7712	AJ45	.1	.1						
5	Abutment—choke control	ACH5112	AJ46	.1	.1						
6	Nut for choke abutment	FNZ103	AJ47	.1	.1						
7	Washer for choke abutment (spring)	LWZ203	AJ48	.1	.1						
8	Clamp—choke control cable	AHH5309	AJ49	.1	.1						
9	Nut for cable to clamp	FNZ104	AJ50	.1	.1						
10	Washer for cable to clamp (plain)	PWZ104	AJ51	.1	.1	12					
11	Bracket—accelerator spring anchor	AHH5339	AJ52	.1	.1			AHH5623] Com. (C) 24594		
12	Spring—pull-off		AJ53	.1	.1			AHH5624			

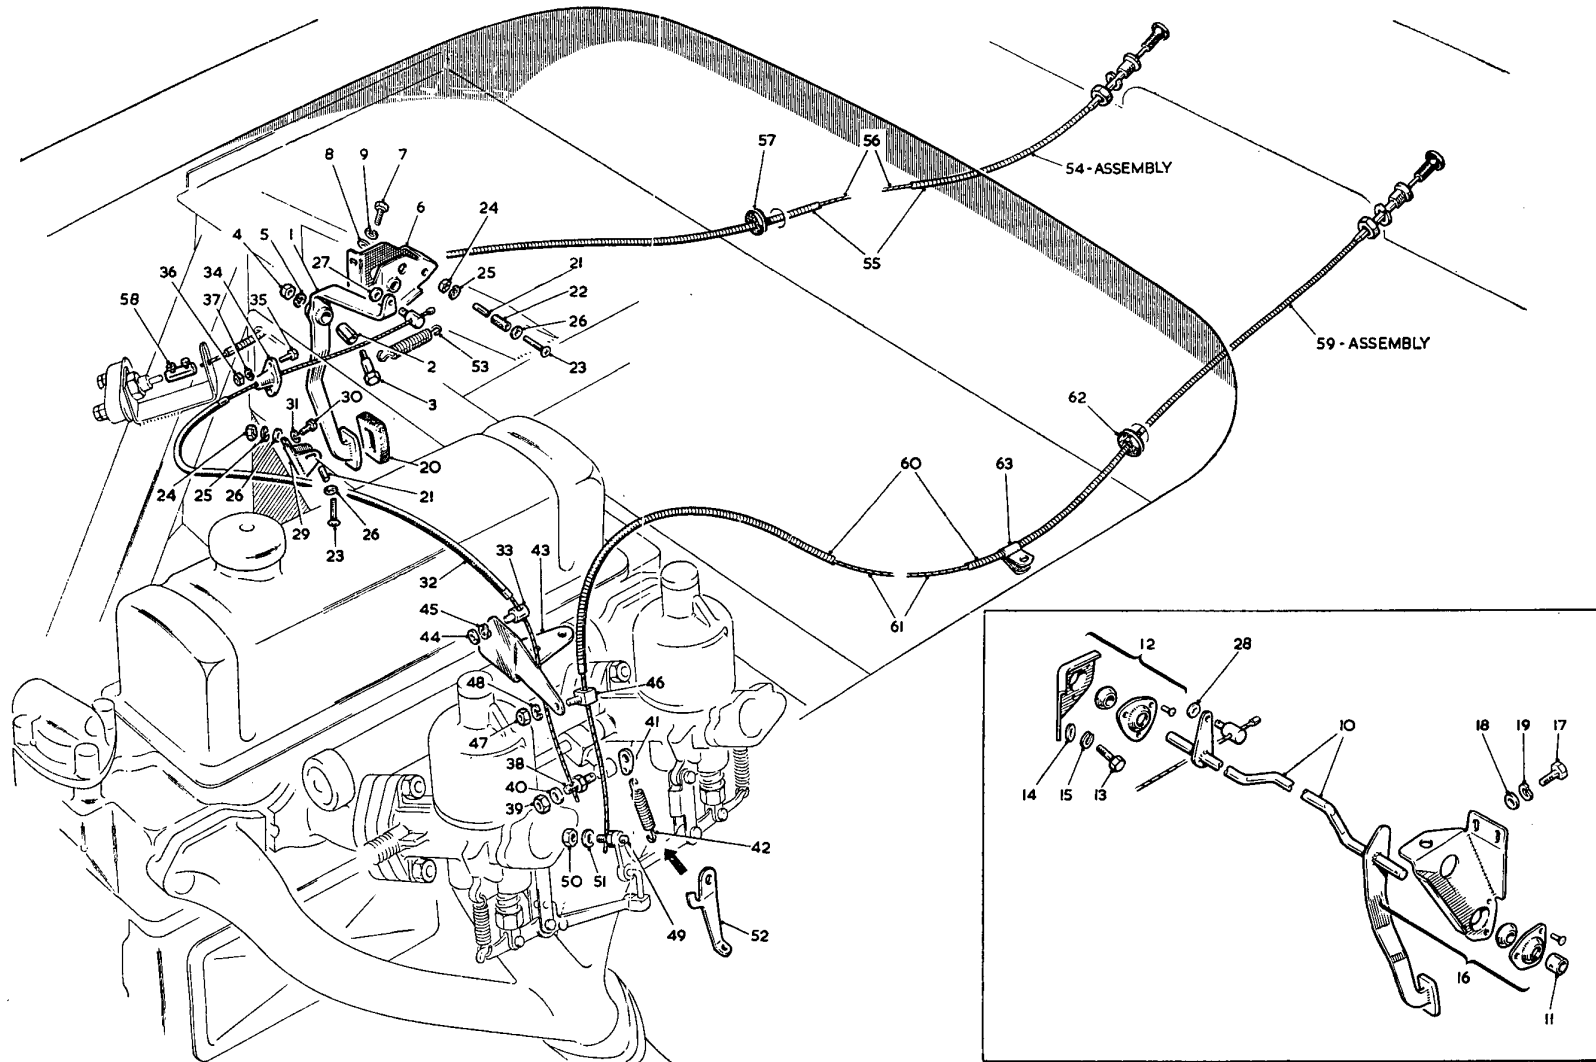

A2276

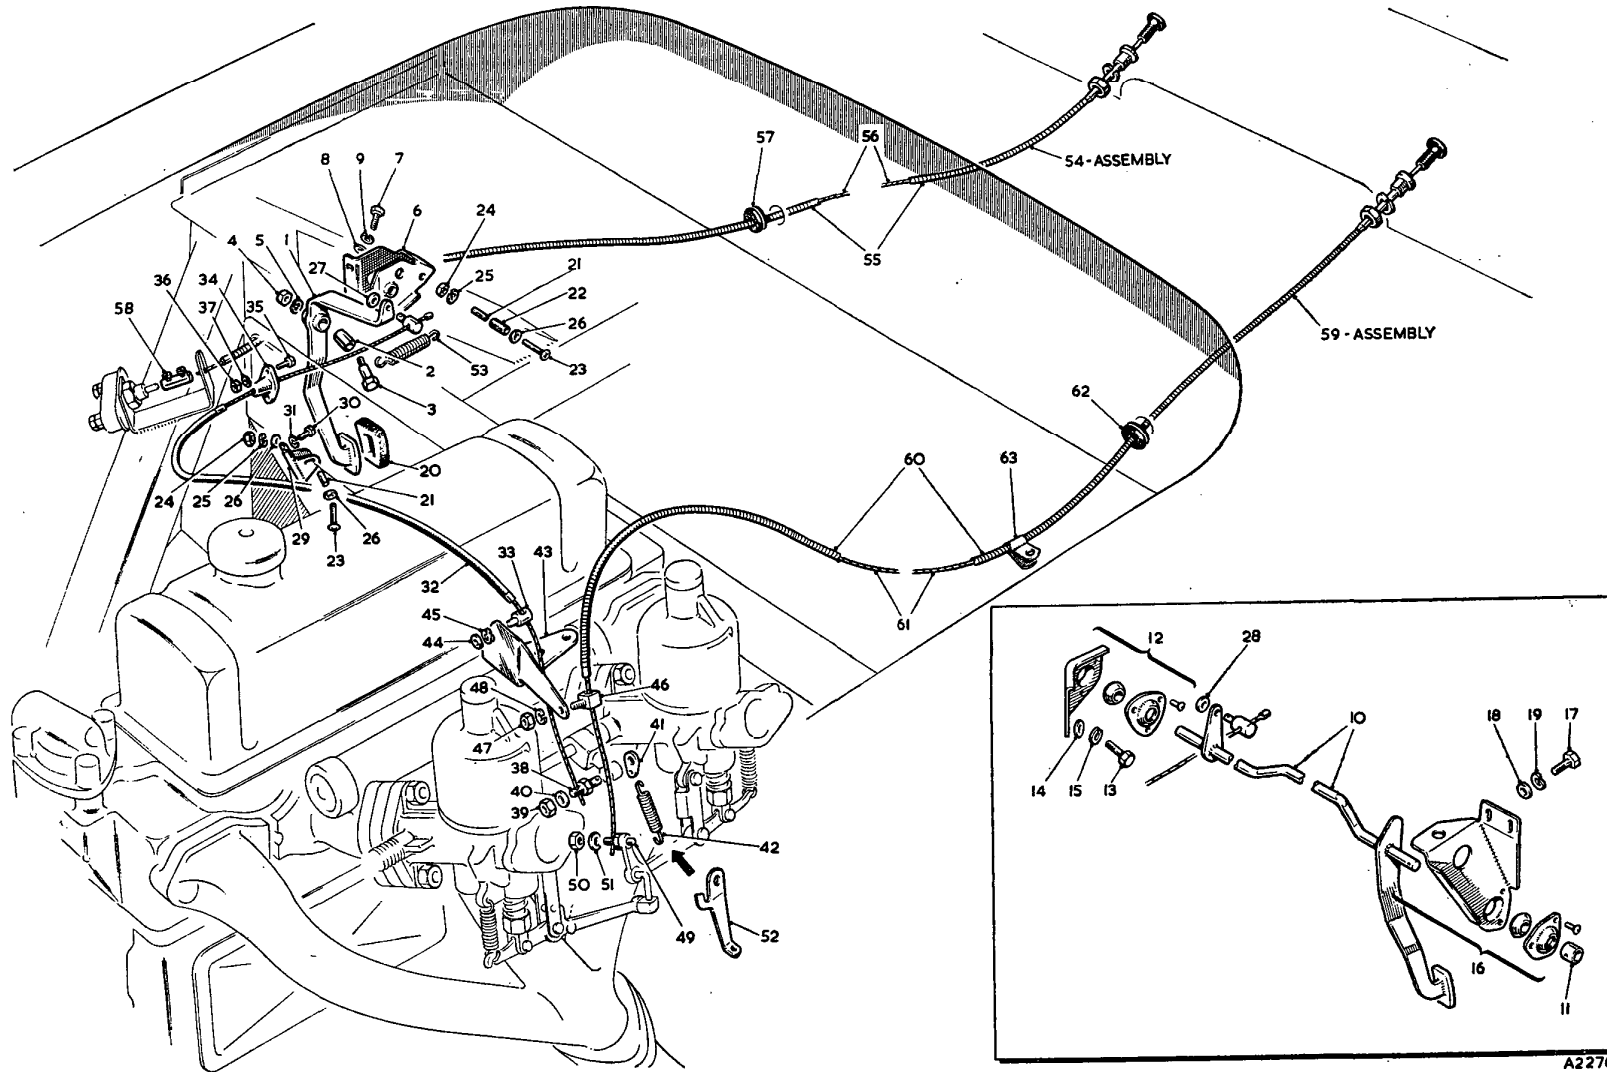

A2276

SERVICE PARTS LIST

THE M.G. Series MGA 1500

Item No.	DESCRIPTION	Commencing (C) 10101		Qty. per Vehicle		Unit of Issue	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.	RHD	LHD			New Part Number	Change Point	Amdt. No.	
	STARTER CONTROL										
1	Starter cable assembly	AHH5327	AJ54	.1							
2	Cable—outer	AHH5328	AJ55	.1							
3	Cable—inner	AHH5329	AJ56	.1							
4	Grommet—starter control (in dash)	RFR108	AJ57	.1	.1						
5	Starter cable assembly	AHH5330			.1						
6	Cable—outer	AHH5331			.1						
7	Cable—inner	AHH5332			.1						
8	Connector coupling—starter pull	3H950	AJ58	.1	.1						
	CHOKE CONTROL										
9	Choke control assembly	AHH5333	AJ59	.1							
10	Cable—outer	AHH5334	AJ60	.1							
11	Cable—inner	AHH5335	AJ61	.1							
12	Grommet—choke control (in dash)	RFR108	AJ62	.1	.1						
13	Choke control assembly	AHH5336			.1						
14	Cable—outer	AHH5337			.1						
15	Cable—inner	AHH5338			.1						
16	Clip—choke cable—to master cylinder blanking plate	PCR0311	AJ63	.1	.1						